


Mounting instructions

Handlebar risers 26867

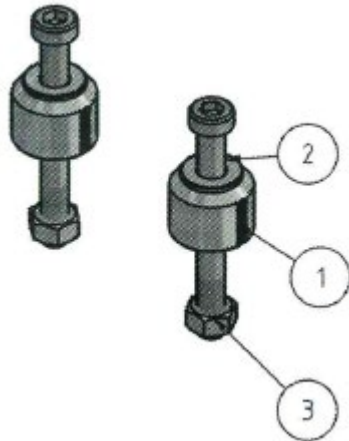

Fits for:

BMW G310GS
BMW G310R



Shipping includes:

2x handlebar rises (1)
2x hexagon socket screw M10 (2)
2x self-locking nut (3)
1x ABE (European street homologation)
1x mounting instructions

Dismantling:

Remove the upper and lower half of the handlebar fixation (clamp blocks). The original M10 screws of the lower handlebar fixation will not be used anymore.

Mounting:

The handlebar risers (distance blocks (1)) are used directly under the lower handlebar fixation (lower clamp block). The antivibration rubbers and all washers will be reused at their original position at the triple clamp! Please use the M10 screws (2) and nuts (3) for mounting the lower handlebar fixation (lower clamp block) and the distance blocks (handlebar risers). The original handlebar clamps must be mounted with the original screws according to the vehicle manual.

Screws and safety:

The original screws must be mounted according to the manufacturer's specifications. The enclosed screws must be fixed with the following torque:
M10 → 46 Nm

Please also secure the screws with liquid threadlocker and regularly check the screws for a firm fit.

Remarks:

After you completed the mounting, please pay attention that the brake lines, Bowden cables and other cables do not tension or scrub!